




# Nostalgia Electrics PCM805 Stand Replacement

This guide shows removing the stands at the bottom of the device.

Written By: Carlton

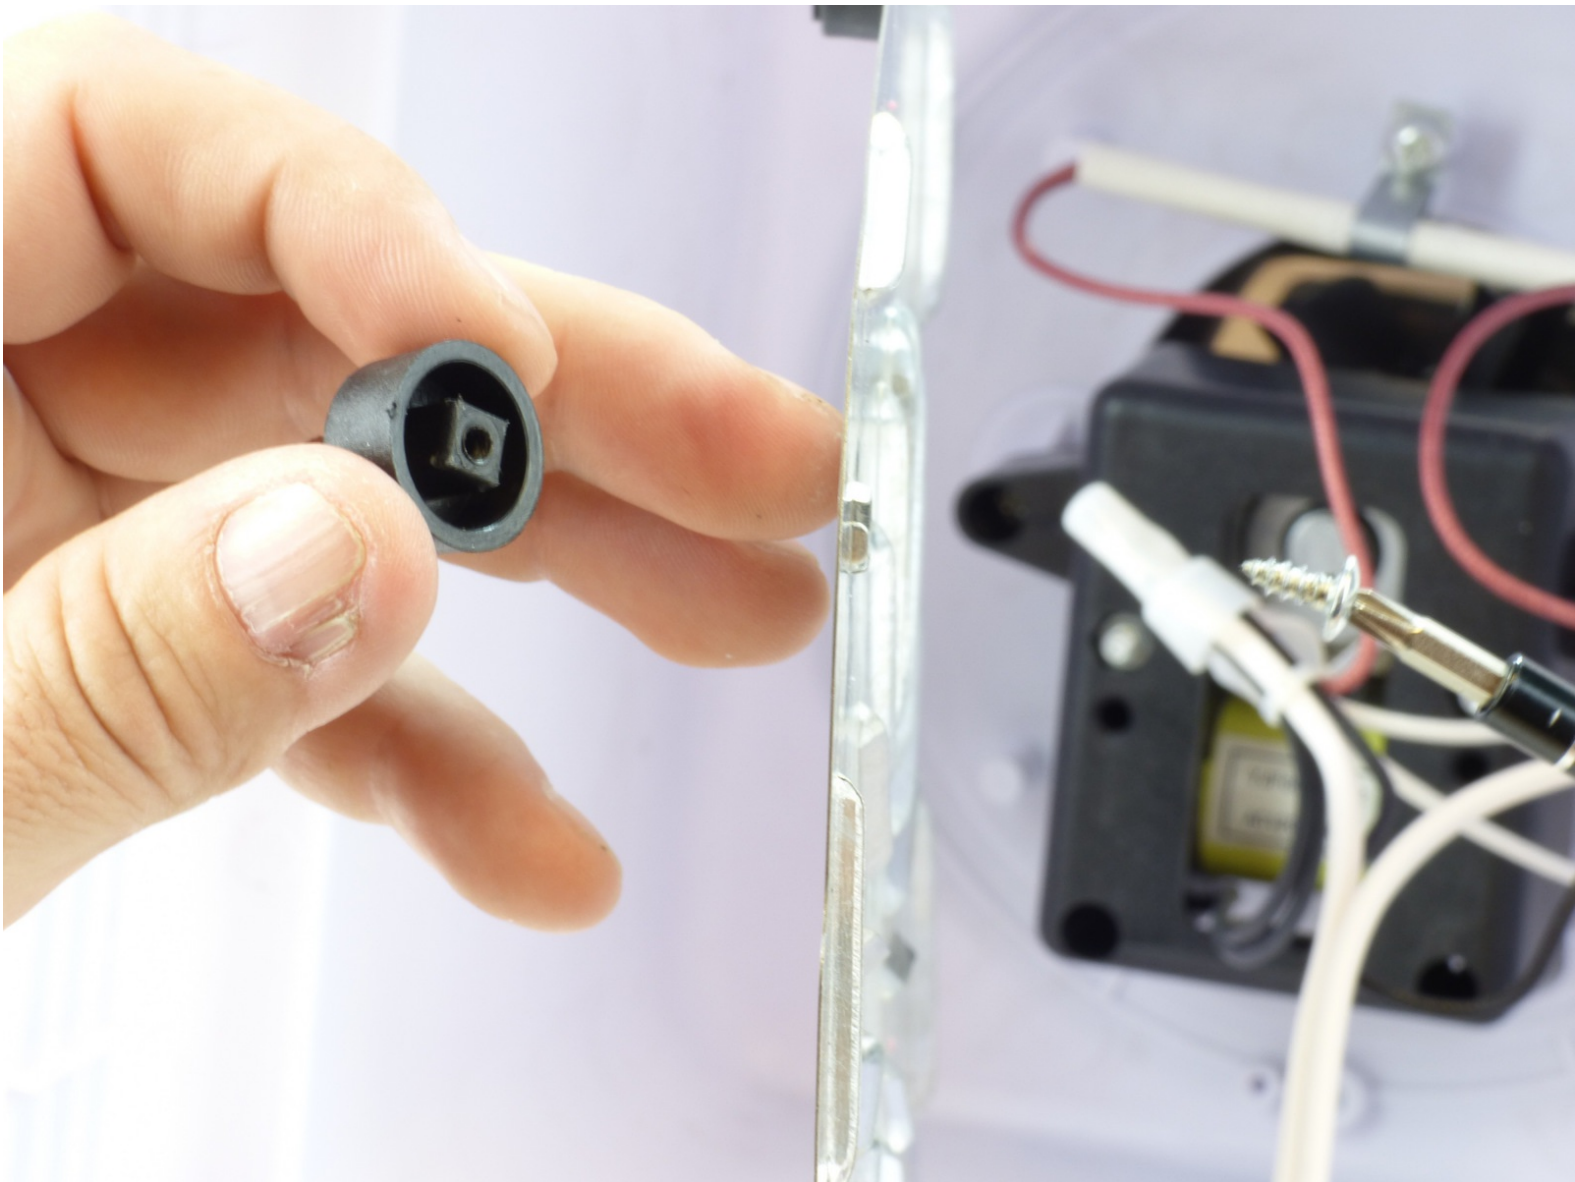

## INTRODUCTION

Use this guide to replace the stands on the bottom of the device if they are missing or damaged.



---



### PARTS:

- [Phillips #2 Screwdriver](#) (1)
-


## Step 1 — Unscrewing the base

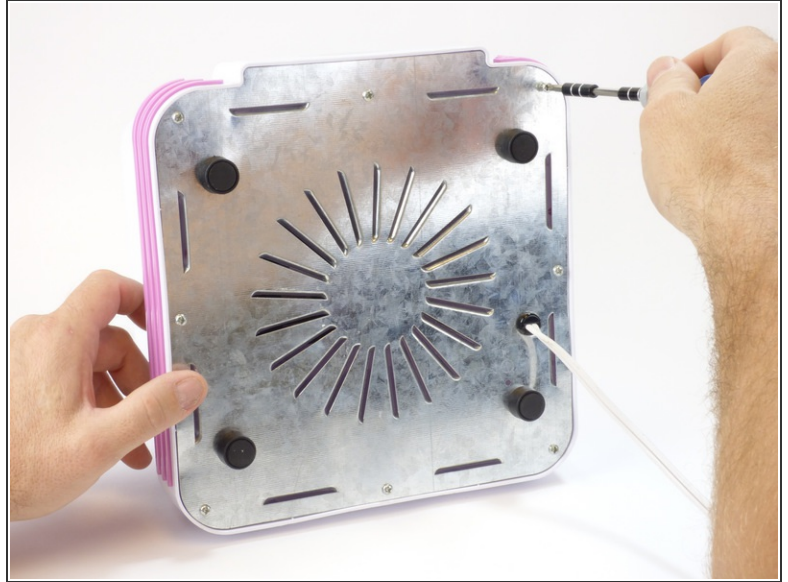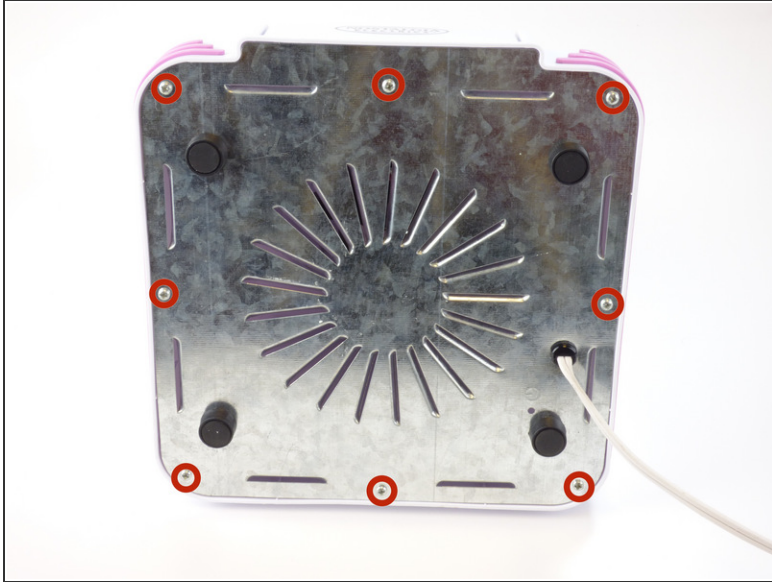


 Unplug the device before following this guide.

- First, place the device on its side, making sure the switch is not facing down.
- Remove the eight 12mm Phillips #02 screws from the base.


## Step 2

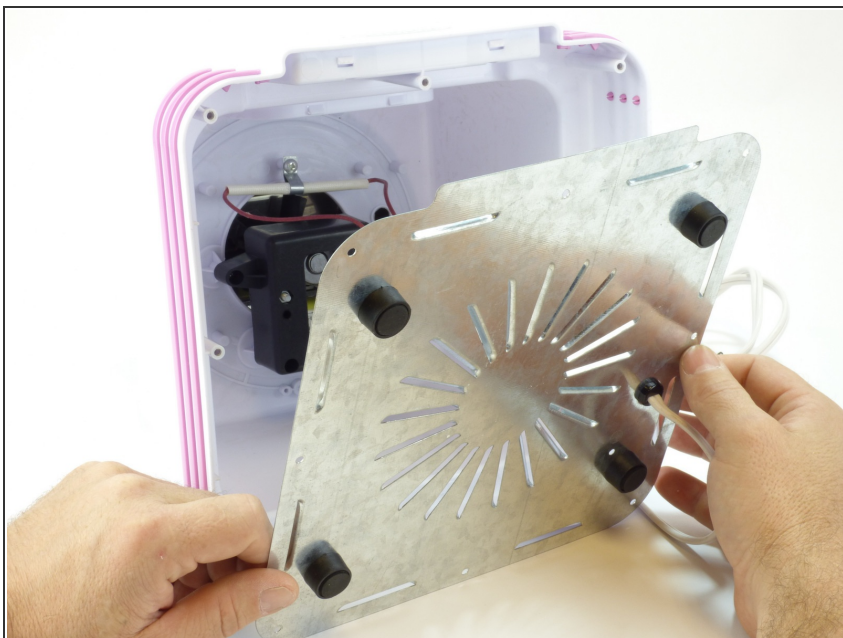

- Gently separate the panel from the device.
-  Be sure not to tug at the wires that are still connected.




## Step 3 — Stand

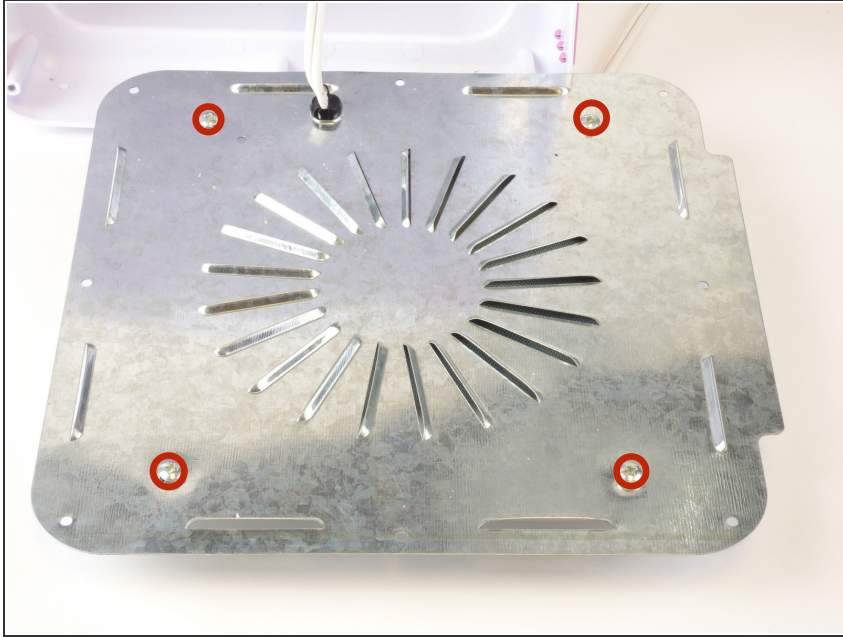

- Locate the four 10mm Phillips #02 screws on the inside of the panel.

## Step 4

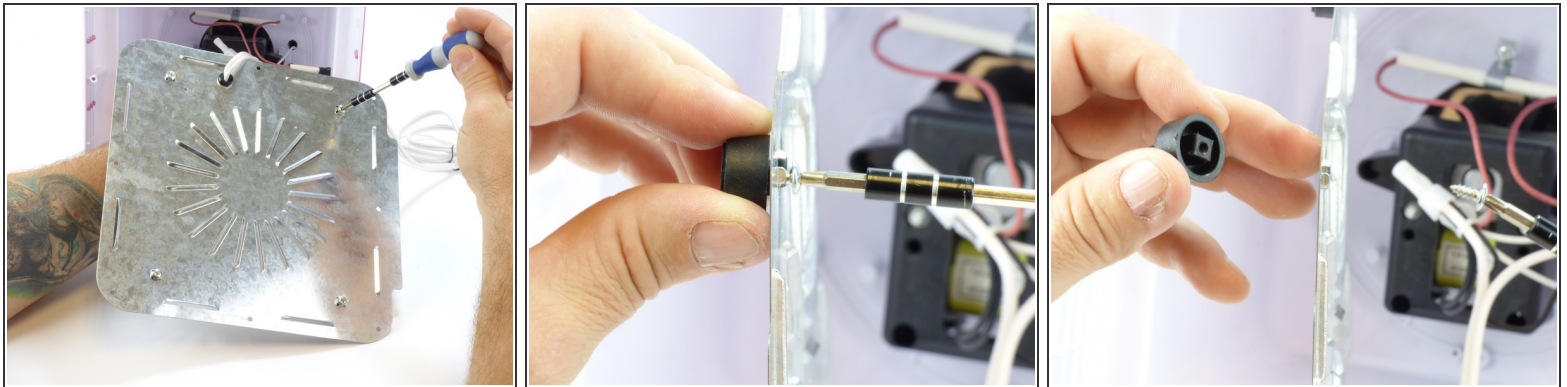

- Remove the screw of the foot you plan to replace.
- ⓘ Place your finger on the back of the the foot you are unscrewing for support.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 04:05:17 PM.